media-tech MT6528 **PL**

DENTAL FLOSSJET

Instructions manual • Instrukcja obsługi • Návod k použití • Installeerimise juhend • Jdemino instrukcija • Instalācijas rokasgrāmata • Руководство по установке • Kasutusjuhe • Uzstādīšanas instrukcija • Εγχειρίδιο χρήσης • Gebrauchsanleitung • Használati útmutató • Manual de instruções

! ŚRODKI OSTROŻNOŚCI

Wszystkie informacje zawarte w tej części mają na celu pouczenie użytkownika o prawidłowej i bezpiecznej obsłudze tego urządzenia, aby uniknąć obrażeń ciała u siebie i innych osób oraz uszkodzenia mienia.

PRZED UŻYCIEM PRZECZYTAJ WSZYSTKIE INFORMACJE

NIEBEZPIECZEŃSTWA

- Niemowlęta, oraz osoby, które nie mogą obsługiwać urządzeń nie powinny używać tego urządzenia. Proszę trzymać go poza zasięgiem dzieci.
- Nigdy nie modyfikuj urządzenia. Nie próbuj też demontować ani naprawiać.
- Nie umieszczaj ani nie przechowuj produktu w miejscu, w którym może spaść lub zostać wciągnięty do wanny lub zlewu.
- Nie sięgaj po produkt, który wpadł do wody. Odłącz natychmiast.
- Nie używaj produktu podczas kąpieli.

NIEBEZPIECZEŃSTWA

- To urządzenie może być używane przez dzieci w wieku powyżej 8 lat i osoby o obniżonych zdolnościach fizycznych, sensorycznych lub umysłowych lub braku doświadczenia i wiedzy, jeśli otrzymały nadzór lub instrukcje dotyczące bezpiecznego korzystania z urządzenia i rozumieją związane z tym zagrożenia.
- Dzieci nie powinny bawić się urządzeniem. Czyszczenie i konserwacja nie mogą być wykonywane przez dzieci bez nadzoru.
- Urządzenie może być używane tylko z zasilaczem dostarczonym z urządzeniem.
- Akumulator należy wyjąć z urządzenia przed złomowaniem.
- Urządzenie należy odłączyć od sieci zasilającej podczas wyjmowania baterii;
- Baterię należy bezpiecznie wyrzucić.
- Odnośnie sposobu wyjmowania baterii, patrz „Utylizacja" na stronie 7.
- Nie napełniaj zbiornika wodą o temperaturze wyższej niż 40°C.
- Jeśli zewnętrzny elastyczny przewód lub przewód tego transformatora jest uszkodzony, musi zostać zastąpiony przez producenta lub jego przedstawiciela serwisowego lub podobną wykwalifikowaną osobę w celu uniknięcia zagrożenia.
- Trzymaj przewód z dala od gorących powierzchni.
- Nie używaj urządzenia, jeżeli zgubiłeś dyszę.
- Nie zanurzaj urządzenia w wodzie.
- Nie używaj do celów innych niż czyszczenie ustne.
- Trzymaj dysze z dala od małych dzieci. Dysza jest na tyle mała, że można ją połknąć i utknąć w gardle.
- Niektóre rodzaje płynu do płukania jamy ustnej mogą uszkodzić sprzęt, powodując pęknięcie obudowy lub zbiornika wody.

Dlatego nie używaj płynu do płukania jamy ustnej w zbiorniku wody.

- Osoby doświadczające bólu zębów lub dziąseł mogą nie być w stanie korzystać z tego urządzenia i powinny skonsultować się ze swoim dentystą.
- Nie naciskaj zbyt mocno dyszy na zęby lub dziąsła. Może to spowodować zranienie dziąseł.

OPIS URZĄDZENIA

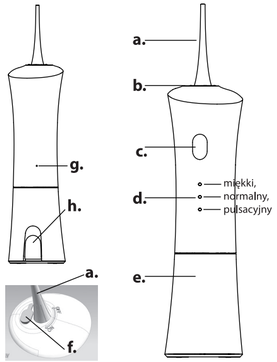

a. Dysza
b. Złącze ładowania
c. Przycisk ON/OFF/MODE (tryb pracy)
d. Wskaźniki trybu pracy (miękki, normalny, pulsacyjny)
e. Zbiornik na wodę
f. Silikonowa zatyczka portu ładowania
g. Otwór wentylacyjny
h. Wlot pojemnika na wodę z korkiem

UŻYTKOWANIE

1. Przed pierwszym użyciem koniecznie naładuj akumulator urządzenie do pełna.
2. Zdejmij gumową zatyczkę złącza ładowania micro USB i włóż wtyczkę urządzenia do gniazda urządzenia (upewnij się, że przed włożeniem wtyczki do gniazdka nie pozostała w nim żadna ciecz).
3. Wtyczkę USB-A przewodu ładowania podłącz do ładowarki USB 5V 1-2.4A
4. Wskaźniki [d] będą migać podczas ładowania. Pełne naładowanie sygnalizowane jest ciągłym światłem wszystkich 3 diod.
5. Załóż z powrotem gumową zatyczkę na złącze micro USB po zakończeniu ładowania.

1.Przymocuj dyszę wkładając ja w otwór aby wytłoczenie wskazywało na pozycję „ON" po czym przekręć ją w pozycję „OFF."
2.Otwórz korek zbiornika wody, ab napełnić go wodą o temp. nie wyższej niż 40°C, następnie zamknij korek.

WAŻNE! Zalecamy używanie do płukania ostudzonej, przegotowanej wody aby zapobiec zanieczyszczeniu irygatora ewentualnymi osadami z kamienia i żelaza



4. Wciśnij przycisk „ON/OFF/MODE" aby wybrać tryb pracy
Soft: delikatne mycie przy wrażliwych dziąsłach
Normal: normalne mycie.
Pulse: mycie i masowanie dziąseł.
5. Trzymaj urządzenie w pozycji pionowej z końcówką dyszy skierowaną w stronę zębów.
6. Trzymaj usta lekko rozwarte aby mogła wylecieć woda.
7.1. Kieruj strumień wody pod kątem 90° do zębów i dziąseł.
7.2. Kieruj strumień powoli wzdłuż zębów.
7.3. Kieruj strumień wody wzdłuż linii dziąseł pod kątem 90°.
7.4. Kieruj strumień do przestrzeni międzyzębowych, wokół aparatu ortodontycznego, koron i mostów.



Po zakończonym myciu:
1.Wylej pozostałą wodę ze zbiornika
2. Włącz i szybko wyłącz irygator aby pozbyć się resztek wody z samego urządzenia.
3. Wytrzyj urządzenie do sucha szmatką.

Ważne! Aby zapobiec rozprzestrzenianiu się bakterii, upewnij się, że wewnątrz urządzenia nie ma wody. Jeżeli nie zamierzasz korzystać z tego urządzenia przez dłuższy czas, upewnij się, że urządzenie jest przetarte i osuszone bezzwłocznie zanim odłożysz do miejsca przechowywania.

Konserwacja

Do czyszczenia urządzenia używaj wyłącznie wody lub neutralnego środka czyszczącego. Nigdy nie używaj środków żrących lub ściernych (np. środków do usuwania octu lub kamienia), ponieważ mogą one uszkodzić urządzenie. Nie myć w gorącej wodzie o temperaturze powyżej 50°C. Trzymaj urządzenie z dala od obszaru o wysokiej temperaturze i unikaj bezpośredniego światła słonecznego.

Część główna
1.Usuń brud mydłem w płynie i wodą, wytrzyj do sucha.
2. Nie zanurzaj w wodzie części głównej.
3. Wysusz gdy opłuczesz wodą

Korek zbiornika wody
Wytrzyj brud szmatką.

Dysza
1. Przemyj wodą i wytrzyj miękką szmatką.
2. Wymień dyszę co 6 miesięcy.

Zbiornik
1.Przemyj wodą i wytrzyj miękką szmatką.
2. Wysusz zbiornik, jeżeli nie jest używany przez dłuższy czas.

WAŻNE! Port ładowania micro USB należy zawsze utrzymywać w czystości i chronić przed zamoczeniem. Przed każdym użyciem upewnij się, że silikonowa zatyczka dokładnie zakrywa port ładowania micro USB, gdyż zalanie tego portu wodą spowoduje uszkodzenie urządzenia co nie jest objęte gwarancją.

WAŻNE! Nigdy nie używaj irygatora „na sucho". W przypadku skończenia się wody w zbiorniczku natychmiast wyłącz urządzenie przyciskiem ON/OFF i uzupełnij wodę.

Ze względu na ciągły rozwój specyfikacja oraz wygląd urządzenia może ulec zmianie bez wcześniejszego powiadomienia. Pomoc techniczna dostępna na www.media-tech.eu

Rozwiązywanie problemów

Problem	Możliwa przyczyna	Rozwiązanie
Nie działa	Jeżeli dopiero co zakupiłeś produkt lub nie był używany przez dłuższy czas, akumulator jest rozładowany	Ładuj urządzenie przez co najmniej 6 godzin
	Akumulator jest zużyty	Skontaktuj się z serwisem jeżeli urządzenie jest na gwarancji
Działa tylko kilka minut (nawet po naładowaniu)	Za krótki czas ładowania	Ładuj urządzenie przez co najmniej 6 godzin
Słabe ciśnienie wody	Zabrudzona dysza	Wyczyścić lub wymienić dyszę
	Dysza jest zdeformowana	
	Zbiornik jest pusty	Dolej wody
	Urządzenie jest przechylone za bardzo podczas użycia	Używaj urządzenia w pozycji pionowej

media-tech MT6528 **EN**

DENTAL FLOSSJET

Instructions manual • Instrukcja obsługi • Návod k použití • Installeerimise juhend • Jdemino instrukcija • Instalācijas rokasgrāmata • Руководство по установке • Kasutusjuhe • Uzstādīšanas instrukcija • Εγχειρίδιο χρήσης • Gebrauchsanleitung • Használati útmutató • Manual de instruções

! PRECAUTIONS

All information contained in this section is intended to instruct the user in the proper and safe operation of this equipment to avoid personal injury, injury to others, and property damage.

READ ALL INFORMATION BEFORE USE

DANGERS

- Infants and people who cannot operate devices should not use this device. Please keep it out of reach of children.
- Never modify the device. Also, do not attempt to disassemble or repair.
- Do not place or store the product where it could fall or be dragged into a bathtub or sink.
- Do not reach for a product that has fallen into water. Disconnect immediately.
- Do not use the product while bathing.

DANGERS

- This appliance can be used by children over 8 years of age and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should not play with the device. Cleaning and maintenance must not be performed by children without supervision.
- The device may only be used with the power supply supplied with the device.
- The battery must be removed from the device before scrapping.
- The device must be disconnected from the mains when removing the battery;
- The battery should be disposed of safely.
- For how to remove the battery, see "Disposal" on page 7.
- Do not fill the tank with water at a temperature higher than 40°C.
- If the external hose or cable of this transformer is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid a hazard.
- Keep the cord away from hot surfaces.
- Do not use the device if you have lost the nozzle.
- Do not immerse the device in water.
- Do not use for purposes other than oral cleaning.
- Keep the nozzle away from small children. The nozzle is small enough to be swallowed and get stuck in the throat.
- Some types of mouthwash can damage the equipment by cracking the housing or water tank.

Therefore, do not use mouthwash in the water tank.

- People experiencing tooth or gum pain may not be able to use this device and should consult their dentist.
- Do not press the nozzle too hard on your teeth or gums. This may cause injury to the gums.

DEVICE DESCRIPTION

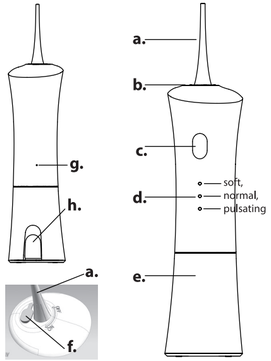

a. Nozzle
b. Charging connector
c. ON/OFF/MODE button (operating mode)
d. Operating mode indicators (soft, normal, pulsating)
e. Water tank
f. Silicone charging port plug
g. Ventilation opening
h. Water tank inlet with plug

USE

1. Before first use, be sure to fully charge the device's battery.
2. Remove the rubber cap from the micro USB charging connector and insert the device plug into the device socket (make sure there is no liquid left in the socket before inserting the plug into the socket).
3. Connect the USB-A plug of the charging cable to a 5V 1-2.4A USB charger
4. The [d] indicators will flash while charging. Full charging is indicated by the continuous light of all 3 LEDs.
5. Put the rubber cap back on the micro USB connector after charging is complete.

1. Attach the nozzle by inserting it into the hole so that the embossing points to the "ON" position, then turn it to the "OFF" position.
2. Open the water tank cap to fill it with water at a temperature not higher than 40ºC, then close the cap.

IMPORTANT! We recommend using cooled, boiled water for rinsing to prevent contamination of the irrigator with possible scale and iron deposits.



4. Press the "ON/OFF/MODE" button to select the operating mode
Soft: gentle cleaning for sensitive gums
Normal: normal washing.
Pulse: washing and massaging the gums.
5. Hold the device in a vertical position with the nozzle tip pointing towards the teeth.
6. Keep your mouth slightly open to let the water escape.
7.1. Direct the water stream at a 90° angle to the teeth and gums.
7.2. Direct the stream slowly along the teeth.
7.3. Direct the water jet along the gum line at a 90° angle.
7.4. Direct the jet to the interdental spaces, around orthodontic appliances, crowns and bridges.



After washing:
1.Pour out the remaining water from the tank
2. Turn the irrigator on and off quickly to remove any remaining water from the device itself.
3. Wipe the device dry with a cloth.

Important! To prevent the spread of bacteria, make sure there is no water inside the device. If you do not intend to use this device for a long time, make sure that the device is wiped and dried immediately before storing it.

Maintenance

Use only water or a neutral cleaning agent to clean the device. Never use caustic or abrasive agents (e.g. vinegar or limescale removers) as they may damage the device. Do not wash in hot water above 50ºC. Keep the device away from high temperature area and avoid direct sunlight.

Main part
1.Remove dirt with liquid soap and water, wipe dry.
2. Do not immerse the main part in water.
3. Dry after rinsing with water

Water tank cap
Wipe off the dirt with a cloth.

Nozzle
1. Rinse with water and wipe with a soft cloth.
2. Replace the nozzle every 6 months.

Tank
1.Rinse with water and wipe with a soft cloth.
2. Dry the tank if it is not used for a long time.

IMPORTANT! The micro USB charging port should always be kept clean and protected from getting wet. Before each use, make sure that the silicone plug fully covers the micro USB charging port, as flooding this port with water will damage the device, which is not covered by the warranty.

IMPORTANT! Never use the irrigator dry. If the water in the tank runs out, immediately turn off the device using the ON/OFF button and refill it.

FEATURES

- Portable dental water flosser
- Gently and effective washing interdental areas, braces, dental crowns & bridges
- 3 washing modes: normal, soft, pulse
- Water tank capacity: 150ml
- Efficiency: water pressure 20~110psi, 1200 pulse/min (pulse mode)
- 3 nozzle types
- 360° nozzle rotation
- Micro USB cable charging
- 3 min auto shut-off timer
- Waterproof: IPX7 for water cleaning
- Low noise: <75dB
- Power: lithium rechargeable battery to use fully charged device up to 40 cleaning cycles
- Dimensions: 60x60x215mm
- Weight: 269g

Due to continuous development, the specifications and appearance of the device may change without prior notice. Technical support available at www.media-tech.eu

Troubleshooting

Problem	Possible cause	Solution
Doesn't work	If you have just purchased the product or it has not been used for 3 months, the battery is discharged	Charge your device for at least 6 hours
Only works for a few minutes (even after charging)	The battery is exhausted	Contact the service center if the device is in warranty
	Charging time too short	Charge your device for at least 6 hours
Weak water pressure	Dirty nozzle	Clean or replace the nozzle
	The nozzle is deformed	
	The tank is empty	Add water
	The device is tilted too far during use	Use the device in a vertical position

V3.0

D Niniejsza ulotka zawiera informacje dotyczące produktu firmy DENTAL FLOSSJET, w zakresie: Jdemino, Jdemino instrukcija, Jdemino instrukcija, Jdemino instrukcija